

IMPORTANT - Update Procedure

DV-HD805

How to update

By download from website

- 1 Turn on the player.
- 2 See the "Firmware Update" section of the Owner's Manual (P.41).

By update disc

- 1 Turn on the player.
- 2 Wait until "No Disc" appears on your monitor e.g., TV.
- 3 Load the update disc into the player.

- 4 A message will appear and the firmware update will automatically start.
DO NOT UNPLUG, TURN OFF, OR USE ANY OTHER FEATURE OF YOUR PLAYER DURING THE FIRMWARE UPDATE PROCESS.

Front Display


1/ER UP

2 STEP 3/5

23 STEP 4/5

234STEP 5/5

TV Monitor

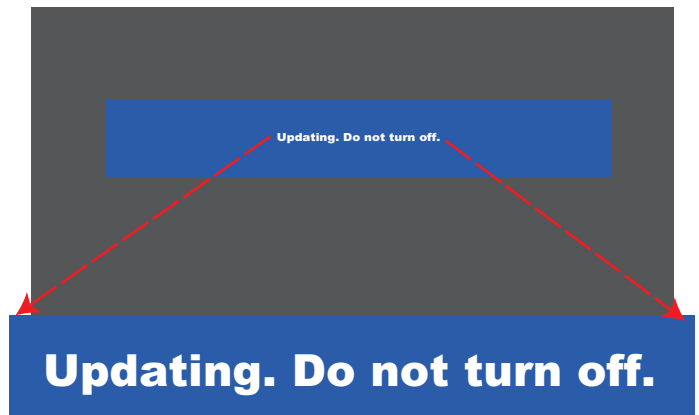

When the firmware update is complete, the player will automatically open the disc tray and turn itself off. Take out the update disc from the disc tray, and power on the player again.

Now you can use the updated software.

Please refer to the update notes on Onkyo website <http://www.us.onkyo.com> for details.

Disconnecting the player's power during the update process will cause the writing of the firmware update to the player to be halted and the player may no longer operate properly. If the player stops working, please contact ONKYO Product Support 1-800-229-1687.